 


ENGLISH

# INSTRUCTION MANUAL



TWO-IN-ONE GAMING SYSTEM

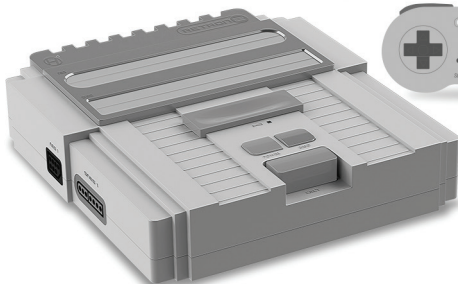

[www.hyperkin.com](http://www.hyperkin.com)

©2015 Hyperkin®. Hyperkin® and RetroN® and their logos are trademarks and/or registered trademarks of Hyperkin, and/or its affiliated companies. All other product names and images, trademarks or registered trademarks are properties of their respective owners. This product is NOT 100% official and is NOT manufactured, guaranteed, sponsored, endorsed or approved by Nintendo. All rights reserved.

## ENGLISH / TABLE OF CONTENTS ..... 01

 
Package Contents	..... 02
RetroN <sup>®</sup> 2 Layout	..... 03
RetroN <sup>®</sup> 2 Setup	..... 04
Playing Games	..... 05
Using NES or SNES Controllers	..... 05

### **Hyperkin's Warranty: 1 Year Limited Warranty**

Please visit [www.Hyperkin.com/warranty](http://www.Hyperkin.com/warranty) to register your official Hyperkin product for Hyperkin's Warranty, as well as promo updates. You will have two weeks from your date of purchase to register with the required proof of purchase, otherwise you will not be qualified for Hyperkin's Warranty.

Thank you for purchasing the RetroN® 2 Gaming System. For your safety and the safety of others, please carefully read the instruction manual before using this product.

## PACKAGE CONTENTS

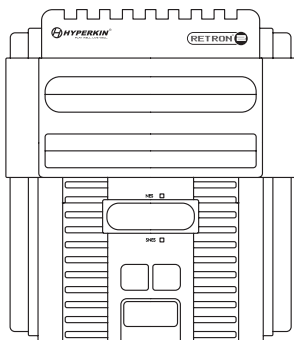


RetroN® 2 Console




1-RetroN® 2  
Controller for NES



 
1-RetroN® 2  
Controller for SNES



AC Adapter

 


S-Video Cable

 


AV-Cable

For troubleshooting, contact us at [support1@hyperkin.com](mailto:support1@hyperkin.com).

## RetroN® 2 LAYOUT

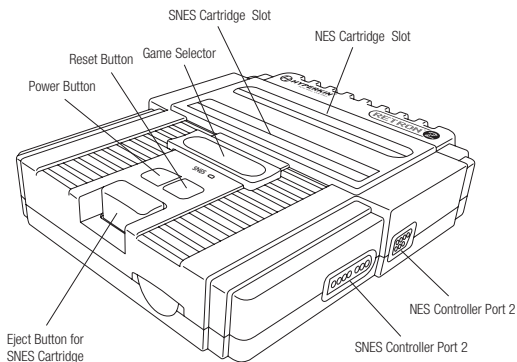 


**FRONT**

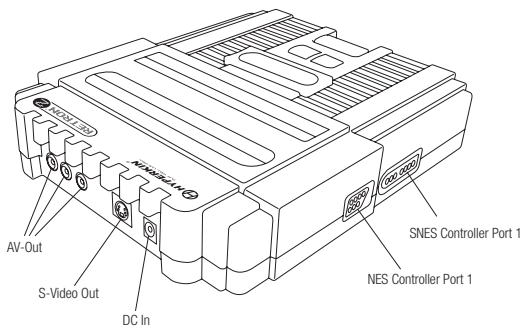 


**BACK**
 
## RetroN® 2 SETUP

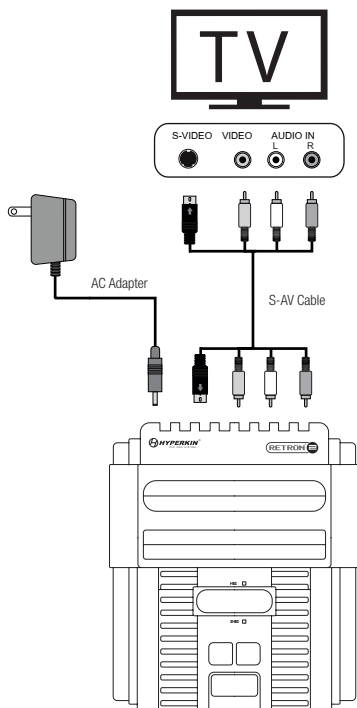


1. Insert the AV/S Cable into the AV or S-Video Out (video output only) on the RetroN® 2. The S-Video function only works on SNES and Genesis games.
2. Insert the other end of the AV/S Cable into the AV or S-Video ports on the TV.
3. Insert the AC Adapter into the DC port on the RetroN® 2.
4. Plug the AC Adapter into a power outlet.

## PLAYING GAMES

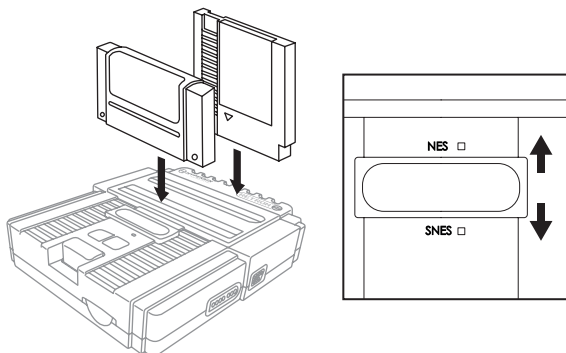 

1. Insert the cartridge into its appropriate slot (NES or SNES).
2. Use the System Selector switch to choose which system you will be playing. A red light will indicate NES is selected. A green light indicates SNES is selected.
3. Turn ON the RetroN® 2 by pressing the Power button.
4. When you're done playing an SNES game, after you have turned OFF the console, you can push the EJECT button to remove the cartridge from the RetroN® 2.

## Using NES or SNES Controllers

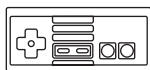

NES Controller



SNES Controller

With the RetroN® 2 turned OFF, insert the controller(s) into their corresponding slot (NES or SNES).

The RetroN® 2 comes with an NES-compatible controller and an SNES-compatible controller. The RetroN® 2 also supports original NES and SNES controllers.

*Note: NES and SNES controllers are only playable with their corresponding systems.*